

AKOplus

Installation Guide

WHAT YOU'LL NEED



Tape measure



Sharp knife



Drill with square bit



AKOplus black screws



AKOplus Transition Bars
(optional)

BEFORE YOU BEGIN

- Ensure the sub-floor is dry, clean, smooth, and stable – remove all grit and debris.
- Do not use adhesive (the gel-foam backing makes later removal difficult).
- Roll out the mat and let it acclimatise until flat.
- If covering more than 10m, plan roll joins and edge bars before starting.

1. PRODUCT CHECK

Confirm the correct quantity and roll consistency before cutting.

Questions? Contact 0800 763 763 or sales@advancematting.co.nz.

2. MEASURE AND CUT

Measure the area required.

Cut the mat to length and width with a sharp knife or scissors.

3. POSITION AND ACCLIMATISE


Roll out the mat and let it acclimatise until flat.

4. FIX WITH SCREWS AND WASHERS

Make sure the mat is pulled tight.

Drill stainless steel screws and cup washers down the centre line and along edges every 400–500 mm.

Work from one end to the other, keeping tension to avoid bubbles or ridges. A tight fit minimises trip hazards and allows water, dirt, and grit to drain freely.

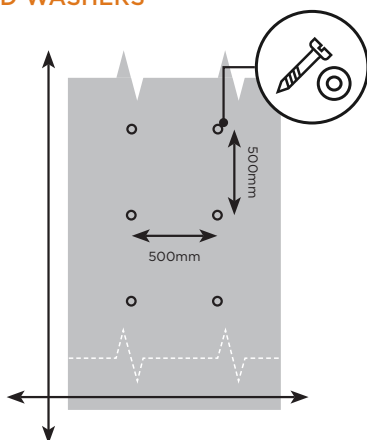

5. SECURE EDGES (OPTIONAL)

Place AKOplus Transition Bars half on the mat, half on the substrate (decking, concrete, or stairs).

Nail or screw the bars in place while keeping the mat fully stretched.


Transition Bars protect exposed sides and give a clean finish.

6. JOINING ROLLS (OVER 10M RUNS)

Butt adjoining roll edges together.

Fit an AKOplus Joiner Bar over the join to lock the two edges flush and prevent tripping.

Repeat Steps 3–5 until the full area is covered.

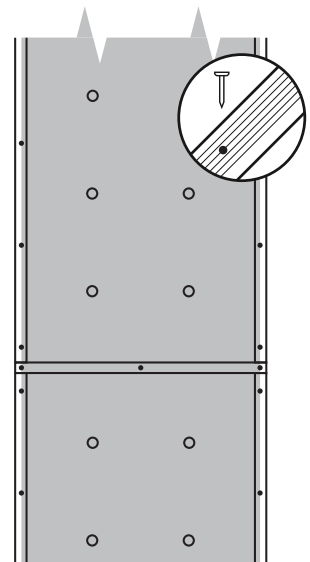

PRO TIPS

- ▲ Avoid adhesive – screws and washers provide better drainage and easier maintenance.
- ▲ Always use edge protection on ramps and stairs.
- ▲ Clean regularly with a vacuum or low-pressure hose; avoid high-pressure washers.

Need help or supplies?

Contact the team at sales@advancematting.co.nz

 **Advance Matting**

sales@advancematting.co.nz

[linkedin.com/company/advancematting](https://www.linkedin.com/company/advancematting)

Freephone 0800 763 763 | International +64 9 836 8811

